

## EMBEDDED SECURITY SYSTEMS 2015

Mirosław Kutylowski

&grades: 40% lecture, 60% lab

exam, no tests during the course, exam in English unless...

short problems, skills examined not knowledge

lower bound: 40% 3, 50% 3.5, 60% 4, 70 % 4.5 80% 5.0

### Objectives

presentation of architecture, limitations and functionalities of embedded systems used in security area C2 developing programming skills concerning cryptographic smart cards and FPGA

---

1. smart cards  $\approx$ 8 hours
  2. telecommunication systems  $\approx$ 2 hours
  2. HSM, TPM, remote attestation  $\approx$ 4 hours
  3. FPGA  $\approx$ 4
  4. sensor systems  $\approx$ 2 hours
  5. RFID tags  $\approx$ 4 hours
  6. CUDA and parallel programming  $\approx$ 4 hours
- 

### 1. SMART CARDS

#### cards of no-smart solutions:

- **embossed** - credit cards: reading does not require electricity, manipulation more difficult than with magnetic strip
- **magnetic**:  $\approx$ 1000 bits, 3 tracks, track 1: 79 6bit chars, track 2: 40 4bit chars, track 3: 107 4-bit chars, limited density (movement in reader against the head), standard data, track 3 for read-write, no physical protection, cheap readers, accidental erasure by a nearby magnet, horror as ATM cards


#### smart cards: classification

- memory cards (with security logic and without)  
usually memory: non-volatile EEPROM, serial communication, control logic: where you can write. Cheap. E.g. prepaid telephone cards
- processor: with coprocessor or without (as bad as: RSA in 20 minutes)
- contact or wireless
- multimegabyte

**Contactless cards:**

- energy: inductive (low!)
- small range (typically 10 cm)
- a reader may activate it from distance
- response with low energy, recognizable from a short distance only
- memory: kilobytes
- well sealed against corrosion
- main parts:
  - antenna (most area of the card)
  - electronic part: modulation, demodulation, clock generator, voltage regulation, reset generation
  - interface between RF interface and memory chip
  - access logic
  - application data: EEPROM, ROM

**processor cards:**

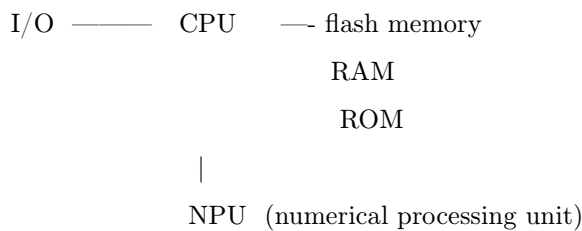

**contacts:**

- 8 fields, normally 6 used (2 for future applications), places for contacts strictly determined in standard
- ground (GND), voltage (Vcc) , I/O, clock (CLK), CTRL, sometimes: Single Wire Protocol (SWP), USB
- easy to destroy
- corrosion, mechanical scratches, not for intensive use

**security tokens:**

- type 1: USB tokens – contact interface like in USB, insert into a port after breaking out of a card
- type 2: small display (eg. 4 digits). input also possible: e.g. a card with 2 buttons (each one side of the card), battery inside

**optical:**

- writing technique - like CD (linear and not circular)

- area designated field according to standards, may leave place for contact interface of a chip and magnetic strip, less place for graphical part on the card
- megabytes ( $\approx 6\text{MB}$  storage)
- redundancy, therefore not easy to destroy information
- usage: e.g. border control cards (Mexico-USA)

**Physical properties:**

standard format: 85.6x54 mm (ID-1), other formats for SIM cards (in larger ID-1 cards with stamping),

parameters:

- mechanical robustness (card and contacts)
- temperature resistance
- surface
- electrostatic discharge
- electromagnetic susceptibility
- ultraviolet radiation
- X-ray radiation

**Material:** trade-off with different properties

PVC: polivinyl chloride, credit cards, cheap, problems with low and high temperatures, injection molding impossible, lifetime 2 years, cost factor: 1

ABS: mobile, termally stable up to 100 C, laser engraving poor, lifetime 3 years, cost factor: 2

PC: polycarbonate, ID cards, durable, 160 C, problems with hot stamping, lifetime 5 years, cost factor: 7, low scratch resistance,

PET: health cards, mechanical: very good resistance, lifetime 3 years, cost factor: 2.5

**Graphical security means:**

- Guilloche patterns - fine lines on the surface under the outer transparent foil, in case of any manipulation the pattern destroyed. Technique used on bank notes
- colored signature field - printed paper strip glued to the surface
- microtext - look like simple lines but something printed – used on bank notes, defence against photocopying, readable only under a loupe
- ultraviolet ink
- barcodes (one and two dimensional), two dimensional PDF 417 can encode up to 1000 bytes, error correction codes so that up to 25% of the surface can be damaged (dirty)

- hologram - few companies in the world, cheap, holograms are embossed holograms, holograms reflected in diffuse daylight (some holograms require laser light), permanently bonded to the surface microstructure,
- kinegram - as holograms, show different image from different angles.
- MLI: (multiple laser image) - small lenses, some are blacked by the laser. Looks like a hologram but can contain personalized information (holograms are always the same)
- embossing - like in credit cards (the characters are pressed with a considerable force). Rather old style...
- laser engraving (surface or inside, under the coat) – equipment fairly expensive, used to personalize cards. However, it is slow (major slow down for production of ID cards). However - a professional forger can make corrections ...
- scratch field – nice for card delivery. The character printed under the coat are not readable even with ultraviolet, infrared light etc
- thermochrome (TC) display: not a real display, but can be reprinted with a special reader. heating a point to  $120^{\circ}C$  makes a black dot. Heating the whole strip makes it almost transparent again
- MM (modulated feature) – hidden MM box, invisible, contains control digits for the contents of the magnetic strip. Used by POS and ATM terminals. Control digits computed with MM algorithm

#### **Chip modules:**

- the chip too fragile and too thick to be laminated on the surface. It is inserted inside
- electrical connections are the problem, automatic bonding of the gold wires to the back of contacts with ultrasonic welding
- Chip-on flex modules, stages of production:
  - tape with empty modules
  - gluing the dice into modules
  - bonding the dice
  - encapsulating the dice
- lead-frame: chip produced together with contacts and the simply inserted by a robot into the card body and glued

#### **Electrical properties:**

- 8 connections, 2 auxiliary and can be omitted or used e.g. for USB connections:
  - C1: Vcc voltage supply
  - C2: RST reset

- C3 CLK clock
- C4 AUX1
- C5 GDN ground
- C6 SPU standard or proprietary use (SWP)
- C7 I/O
- C8 AUX2

```

-----
|C1  C5 |
|C2  C6|
|C3  C7|
|C4  C8|
-----

```

- max 60 mA for 5V, max ambient temperature 50 degrees, 350  $\mu\text{A}$  per megahertz, power consumption too low to cause overheating, power reduction e.g. for SIM in different phases of activity (low if the phone is not transmitting and using cryptoprocessor)
- contact C6 was for EEPROM erasing but not needed anymore, used for Single Wire Protocol
- voltage is a problem: 3V for SIM cards (batteries for smartphones weight optimization), 5V needed for EEPROM erasure. charge pumps applied
- no internal clock supply (potential risk: adversary may increase the clock frequency to create faults, fault cryptanalysis)
- problems with collisions on I/O line (too high currents would destroy interface components)
- protection against out of range voltages, electrostatic charges, precisely defined activation and deactivation sequences: first ground, then voltage, then clock, warm reset when voltage increases on the reset line

### Microcontrollers:

- area: manufacturing costs and durability (bending, torsion), typically 10mm<sup>2</sup>, square shape
- must be integrated, “standard components” are not well suited due to size of the resulting circuit,

- native designs are proprietary, even a crime to check the layout
- semiconductor technology -> density increases -> chip area drops . But some problems: error probability, necessity to decrease voltage, ...
- extremely high reliability needed. So behind the “state-of-the-art” which is frequently instable
- memory small (e.g. 100KB), a 8-bit processor ok for less than 64KB, then extensions, usually CISC (complex instruction set computer) - instruction over a number of steps, some based on RISC (reduced instruction set computer), also 32 bit processors that needed also for interpreter based architectures (Java Card)

---

## MEMORY

**Memory types:**

**non volatile:**

**EPROM** - UV erasure, not suited for smart cards,

**EEPROM** - electrical erasure, cell capacitors, discharged state=0, charged state=1, erase state -> non-erased (single bit), non-erased-> erased: page or sector, both slow, size 1.14  $\mu\text{m}$ , 100.000-1.000.000 erasures, 2-10ms, tunneling effect - if there are electrons on the floating gate then they prevent flow in the substrate

**flash** - a different technique for writing: hot electron injection, write time „flash”, erase like EEPROM, size 0.47, 10.000-100.000 erasures, very fast writing, lower voltage (12V) than EEPROM (17V), NOR flash: free read of individual cells, but complicated circuits, or NAND flash: dense but reading full blocks

**ROM** - connections broken – memory via a circuit, irreversible process - one disconnected never can be reconnected, lack of connection = 0, small: 0.54 $\mu\text{m}$  area size

**volatile:**

RAM - transistors, flip-flop, size 1.87  $\mu\text{m}$  area size, erasures - unlimited, write: 70ns

---

## AUXILIARY UNITS:

**UART** - universal asynchronous receiver transmitter, software solutions would be too slow

**USB** – USB connection has rigid timing requirements, they cannot be guaranteed by the regular chip, 12 MB/s (Full Speed), CRC and buffers on the endpoints

**SWP** single wire protocol - communication between SIM and NFC controller concurrently with the regular I/O, data sent with voltage modulation and returned with current modulation- full duplex,

**timer** - a 16 bit counter (or 16 bit), used for timeout detection, watchdog for security reasons

**CRC** cyclic redundancy clock, Reed Solomon codes,

- $x = x_1 \dots x_k$  is the sequence to be encoded
- $p_x(a) = \sum_{i=1}^k x_i a^{i-1}$  polynomial over some finite field

- $c(x) = p_x(a_1)p_x(a_2)\dots p_x(a_n)$  is the code of  $x$ , where  $a_i$  is the  $i$ th power of the root of degree  $n$ .
- $C(x) = x \cdot A$ , Vandermode matrix, row 1:  $1\dots 1$ , row 2:  $a_1, \dots, a_n$ , row 3:  $a_1^2, \dots, a_n^2$ , and so on
- properties: distance between the codewords:  $n - k + 1$  (this is optimal), since two polynomials of degree  $k$  may have only  $k - 1$  equal values
- it can correct half of it bits

**RNG** temperature etc. hard to implement,

**pragmatic solutions:** PRNG (sometimes poor),

be aware that the algorithm implemented is not original one (e.g. DSA but DSA+LFSR+...),

**PRNG:** the next value derived with the key from the previous values.

- Round Robin- eg 12 values in a buffer
- testing - NIST tests, good for excluding biased/faulty generators, no security guarantees
- hardware Trojans: faults in the circuitry that are not changing the layout-wires, but e.g. the number of electrons in the substrate (invisible during the audit, but may be used to "break randomness" if the manufacturer knows what are the faulty places

**Clock multiplication:** external clock cannot have frequency over 5MHz. Internally we can increase it a few times with a multiplication circuit. Potentially: one could adjust the speed to adjust energy usage (problems with interference of oscillators with the GSM, UMTS communication)

**MMU:** memory management unit for monitoring boundaries between the application programs (strict separation). must be tailored to the operating system of the chip

**JAVA accelerator:** approaches 1) dedicated hardware component, high speed but takes place, 2) native instructions for java

**Symmetric crypto coprocessor:** 75 microseconds per DES, 150 per 3DES

**asymmetric coprocessor:**

RSA up to 2048, problematic key generation, probabilistic time

EC 160-256 bits: create DSA, random numbers problematic

hash functions: SHA, Keccak, SHA1 in PL

memory for keys:

- masterkey, derived keys, dynamic keys (session)
- PIN: master or deriving from master key, PIN updates in different memory, problems of nonuniformity of PIN (no leading zeroes, etc), subclasses where strategy gives higher chances

---

## DATA ENCODING

Abstract Syntax notation, ASN.1: primitive types (boolean, integer, octet string, bitstring), constructed data types, (page 111)

encoded via TLV structures: (Tag, Length, Value), tags for frequently used data types are in a standard,

BER -Basic Encoding Rules, Distinguished Encoding Rules – subset of BER

Some details:

- tag:1-2 bytes, the first byte: b8, b7 define the class: universal, application, context-specific, private class, b6: data object primitive or constructed, b5-b1: tag code, if all ones then the second byte specifies the tag code
- Length: 1-4 bytes:
  - 1 byte: 00 to 7F: encode length 0-127
  - 2 bytes: 1st byte 81, 2nd byte encodes length 0-255
  - 3 bytes: 1st byte 82, 2nd and 3rd bytes encode length 0-65535
  - ...

properties: not too flexible, but not too high overhead, much better than XML

#### Data Compression (useful for images):


only very simple methods used as compression/decompression procedures might require too much space and it does not pay off to compress. Two main methods:

- run-length encoding: blocks of zeroes and ones, each longer block encoded by its length after an escape symbol, short blocks encoded directly,
- encodings like Huffman encoding: variable length encoding

---

#### Internal logical organization - state machines

- after activation and reset always in the same initial state
- in case of any trouble - reset
- state machine: transitions describing the events
- standard SDL notation:

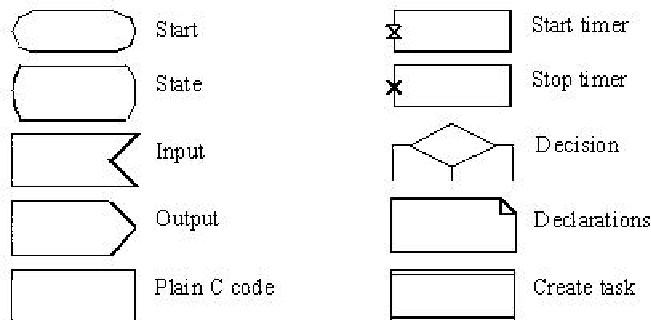



and circle as a label (instead of C code from picture simple conditions)

- try to write automaton with flow without cycles (except for reset) with a few short paths
- input consisting of (standard) instructions. Their execution automatically delivers response to the reader. Later more about instructions.
- methods to design automata with compound states
- example ([page 122](#))

---

## FILE MANAGEMENT

### general:

- previously direct physical addressing
- still no man-machine interfaces, hexadecimal addressing
- file itself contains all information about itself in a **header**, the rest is the **body**
- header not changed frequently (problems with EEPROM, flash) , so placed in a separate page
- files allocated to memory place for security reasons, shared files sometimes via shared headers
- separation of applications via separation of directories

### lifecycle:

1. CREATE (might be with initial data or not)
2. ACTIVATE/DEACTIVATE – activation necessary before use (only a limited number of files might be active at a time!)
3. TERMINATE - permanently blocked, its memory is permanently inaccessible (secure option)
4. or: DELETE - memory recovered (insecure)

### Types:

MF- Master file, main directory, implicitly selected after activation

DF - Dedicated Files, directories, hierarchy, always not deep (1-2 levels)

ADF - application dedicated files - not below MF

EF - elementary file, data necessary for application

Internal EF - hidden files used by operating system. They cannot be selected for applications

### File names

logical names due to transferability of programs

- File Identifier (FID), 2 bytes, some reserved, e.g. 3F00 is MF
- MF: FID
- DF: FID, DF name (16 bytes, normally bytes 5-16 are AID - application ID: 5 bytes RID (registered identifier: A-international registrations, D-national registration, country code, application provider number)
- EF: FID, SFI (short FID) - to be used in instructions

### **File selection**

one opened for I/O

SELECT (explicitly) or implicit (by READ ..., UPDATE, ...)

### **File structures**

**transparent:** a single sequence of characters, no internal structure, reading file contents by specifying offset, instructions: READ BINARY, WRITE BINARY, UPDATE BINARY

**linear fixed:** equal length records, reading by specifying record number, instructions: READ RECORD, WRITE RECORD, UPDATE RECORD

**linear variable:** frequently not supported, should be avoided, the same instructions as for linear fixed, but execution more complicated

**cyclic:** a fixed number of records of a fixed size, access to first last, previous or next record

**PUT DATA, GET DATA:** for TLV objects

### **Access conditions:**

- defined at file creation and then almost always unchanged
- state oriented (current state is compared with the file access information) or command oriented (which commands have to be executed first)
- global security state (card, state of MF) and local security state (state of a file)

---

## **STANDARD OPERATIONS**

- each card implements some set, but unnecessary commands are removed
- different sets: general, payment cards, telecommunication cards, over 20 standards, important is Global Platform Specification, Common Electronic Purse Specification (CEPS)
- arguments, return values

### **File commands:**

CREATE FILE

ACTIVATE FILE

DEACTIVATE FILE

TERMINATE EF

TERMINATE DF

DELETE FILE

TERMINATE CARD USAGE

SELECT - selects a file, or an upper DF

STATUS - shows selected file and its properties in return, otherwise does not do anything

READ BINARY (number of bytes, offset) return: data, return code

WRITE BINARY ... this is not a write instruction but logical AND

UPDATE BINARY - this is the write operation in the standard meaning

ERASE BINARY (not necessarily physical erase)

READ RECORD, WRITE RECORD (like WRITE BINARY), UPDATE RECORD, APPEND RECORD (adding a new record at the end)

PUT DATA, GET DATA - direct access to TLV objects

SEEK (length of data, pattern, offset, mode (forward from the start, backwards from the start, forward from the next record, backwards from the previous record) returns record number

SEARCH - another standard, file can be checked

SEARCH BINARY- the same for transparent files

INCREASE, DECREASE – for cyclic files, operations on a counter (changing the current position)

EXECUTE – starts executable EF (some operating systems enable this)

#### **PIN commands:**

VERIFY PIN, VERIFY CHV – PIN verification, (CHV = Card holder Verification) , switch: global PIN or application specific (each application may have its own PIN)

CHANGE CHV – reset PIN

RESET RETRY COUNTER – with PUK, counter like in ATM cards enable only a limited number of PIN trials

UNBLOCK CHV (using PUK)

ENABLE VERIFICATION REQUIREMENT – e.g. GSM for PIN with SIM cards

DISABLE VERIFICATION REQUIREMENT – switch off the PIN verification

#### **Security operations:**

GET CHALLENGE - returns a random number

INTERNAL AUTHENTICATE

- sends random number, key number
- return:  $X_{ICC} := E(\text{key}, \text{random})$
- terminal tests the result (showing that the terminal holds the symmetric key)

EXTERNAL AUTHENTICATE

- random number  $R$  sent to the terminal

- $E_K(R)$  sent to card, the card checks whether the result is correct (the key  $K$  is shared with the terminal)

#### MUTUAL AUTHENTICATE

- GET DATA (data about chip number)
  - GET CHALLENGE –  $RND_{ICC}$  transferred to terminal
  - authentication
- a) terminal generates  $RND_{IFD}$ , computes  $X_{IFD} = E_K(RND_{IFD}, RND_{ICC}, \text{chip number})$
  - b) card decrypts, checks if  $RND_{ICC}$  is present there. If no then aborts.
  - c) the card sends  $X_{IFD} = E_K(RND_{ICC}, RND_{IFD}, \text{chip number})$
  - d) terminal decrypts and checks the plaintext  $RND_{ICC}, RND_{IFD}, \text{chip number}$

GENNERAL AUTHENTICATE (for the use e.g. with PACE)

#### PERFORM SECURITY OPERATION

option COMPUTE CRYPTOGRAPHIC CHECKSUM - computes a cryptographic MAC of a file

option VERIFY CRYPTOGRAPHIC CHECKSUM - checks cryptographic MAC of a file

option ENCIPHER – encrypts the data, algorithm and mode determined first by MANAGE SECURITY ENVIRONMENT

option DECIPHER - returns decrypted data

option HASH - returns hash of data, a switch available for performing only the last part of hash computation (for efficiency reasons)

option COMPUTE DIGITAL SIGANTURE

option VERIFY DIGITAL SIGNATURE

option VERIFY CERTIFICATE

option GENERATE

#### **Global Platform:**

LOAD – load data

INSTALL – specifies among others the size of volatile and nonvolatile memory reserved

#### **Hardware test**

TEST RAM

TEST NVM – testing non volatile memory, given area rewritten many times with a pattern

COMPARE NVM – reading NVM and checking if the given pattern really retained there

DELETE NVM – clears a given area of NVM

#### **Electronic Purse commands**

INITIALIZE IEP for Load– options:

load amount, currency code , PPSAM descriptor, random number, user defined data

response: provider id (PPIEP), IEP identifier, cryptoalbo used, expiry date, purse balance, IEP transaction number, key information, signature, return code

#### CREDIT IEP

load: information on key to be used, signature,

response: signature, response code

INITIALIZE IEP for Purchase – the card sends data to the terminal: purse provider identifier, IEP identifier, crypto algorithm used, expiry data, purse balance, currency code, authentication mode, IEP transaction number, key information, signature

DEBIT IEP – charging the balance, parameters: PSAM identifier, PSAM transaction number amount to be debited, currency code, key info, signature, the card returns a signature of the transaction

### **Credit card commands**

#### GET PROCESSING OPTIONS

#### GENERATE APPLICATION CRYPTOGRAM

command: desired application cryptogram, transaction related data

response: cryptogram information data, application transaction counter, application cryptogram, return code

### **Processing times examples:**

(below data may differ for different implementations, especially for cryptographic operations)

READ BINARY 100 bytes: processing time 2ms, transfer 146 ms

UPDATE BINARY 100 bytes with erasing: processing 35ms, transfer 162 ms

EXTERNAL AUTHENTICATE: 235ms processing, 270ms data transfer

INTERNAL AUTHENTICATE: 135ms processing, 201ms data transfer

MUTUAL AUTHENTICATE: 135ms processing time, 163 ms data transfer

VERIFY PIN: 27ms processing time, 56 ms transfer time

DEBIT IEP: 235 ms processing time, 270 ms transfer

CREDIT IEP: 175 ms processing time, 222ms transfer

corollary: processing and time complexity is crucial!

---

## **Communication**

### **sequence of steps:**

1. power up on card

2. card sends ATR, smart card in a sleep mode
3. smart cards obtains APDU and changes to active mode
4. response

points 3 and 4 executed in a cycle

**ATR** “answer to reset”, sent on I/O line, max 33 bytes, usually a few bytes, transmission “divisor rate” the same for all cards, start must occur in a time window (400-40000 clock cycles - eg. up to 8.14 ms for 4.9153MHz frequency of the signal), if not then tries 2 more times

TS - initial character, German: „00111011”, French: „00111111”, start with 1, measures time of elementary time unit: the time between two first falling edges of TS and divides by 3

T0 format character - which interface characters transmitted afterwards in ATR (a few options possible - see below)

interface characters: TA1, TB1, TC1, TA2 ... interface characters defining basic parameters of transmission, like guard time, divisor, etc.

- TA1: initial etu =  $\frac{372}{f} \cdot \text{sec}$ , where  $f$  is the frequency used  
 work etu =  $\frac{F}{D} \cdot \frac{1}{f}$  sec, where  $F$  is the rate conversion factor,  $D$ = bit rate adjustment factor (used due to variations of conditions during operation), the standard describes an encoding for a few combinations of values
- T<sub>Ai</sub> for  $i > 1$  define supply voltage and parameters of the clock

T1, ... Historical characters – chaos, many informations on smart cards, OS, ..

TCK check character (error detection code):

- protocol T=0: not sent as there is bitwise error detection
- protocol T=1: XOR checksum for all bytes starting from T0 up to the TCK

### **PPS (protocol Parameter Selection)**

Some cards allow changing parameters of the transmissions – important for SIM cards, USIM cards.

- there is a fixed collection of possibilities
- some of the configurations are not specified (“for future use”)

### **APDU application protocol data unit**

APDU is the only way of communication with the card.

- fixed format, quite compressed

- initiated by command APDU - sent from the terminal to the card, the answer is response APDU

#### command APDU

- header:
  - CLA (class byte, e.g. GSM denote as 'A0') it may denote credit card, electronic purse, private use, ...
  - INS instruction byte
  - P1, P2: two parameters, (no more possible, the meaning defined by the standard)
- body:
  - Lc field (length of data transmitted)
  - data field
  - Le field (length of expected response)

#### response APDU

- data comes first (length is defined by Le from Command APDU)
- afterwards the status bytes SW1 and SW2. The following options for the status: process completed (normal, warning), process aborted (exec. error, checking error)

#### Secure messaging

the goal: securing the communication with the card: authentication, or even confidentiality

this is a problem even for contact interface as I/O contact can be traced

- **authentic mode procedure:**
  - the CCS (cryptographic checksum) computed, e.g. with AES,
  - the input is the original APDU+some padding (necessary to have a full number of blocks),
  - the out is the old APDU in plaintext encoded as TLV structure plus a TLV encoded CCS
  - Warning: there is no confidentiality!
- **combined mode procedure:**
  - CCS computed similarly as for authentic mode
  - then the resulting APDU encrypted: but only all TLV objects,
  - the result is APDU with CLA, INS, P1,P2 unencrypted, then TLV encoded cyphertext in the data field
  - Problem: the command and parameters are still unencrypted! Information leaked

- A solution: using a command ENVELOPE which says the card to decode the ciphertext and find there the real command to execute
- the response APDU also contains encrypted data

### send sequence counter

also a security mechanism: as APDU might be undelivered e.g. by jamming the radio channel

- started with a random value during a communication session
- then appended at each round
- there are two methods of encoding the counter:
  - as a separate data field
  - the counter is XOR with some portion of APDU before computing CCS – advantage: if the recipient knows the expected value of the counter, then he can easily recompute. Advantage is that no extra communication space required.

### Logical channels

application may run in parallel on the card, no interleaving between request-response, APDU specifies the logical channel - to which application the communication belongs

## Data transmission with contacts

### Physical layer

communication only digital, 0V as reference level, the other level is +5V, or +3V, or +1.8V

conventions: 0V represents 0 (direct convention), or 1 (inverse convention)

based on RS232 (0V used instead of negative voltage)

I/O line is in high level always when the data is not sent

serial communication

asynchronous: so the sender adds the start bit at the beginning of each transmission (low voltage), 8 data bits, followed by the parity bit, and stop bits (used as guard time)

transmission speed: frequency/divider, divider says how many periods of the carrier frequency needed to encode a bit. Typically divider is 372 and 512, 5MHZ max frequency, 32 minimum usable divider so at most 156 250 bit/s

### Memory cards

simplest protocols, variety,

prepaid telephone cards

ISO protocols (15 versions described), mostly used T=0, T=1

### T=0

- France, early standard, simple, minimal memory usage



- used for GSM worldwide
- byte oriented
- command structure: CLA, INS,P1,P2,P3, data field, P3 specifies the length of data field

error handling:

- retransmission of byte immediately if an error detected (not after a block of bytes)
- reporting error I/O line down after byte transmission, in halfway of etu (so in a “wrong place”), during the guard time
- this mechanism technically problematic sometimes, since in some cases below 1 etu nothing is detectable
- alternative mechanism: add 1 to the received command byte as confirmation (note that the comand bytes are coded by even numbers) - becoming technically obsolete solution

SM hard - many versions (with overhead)

interpretation of an APDU by a relatively simple state machine

## **T=1 protocol**

- asynchronous
- half-duplex (both directions communication but not at the same time)
- block oriented (a block is the minimal unit to be transmitted)
- follows layer concept of communication protocols (data for higher layers sent transparently by data link layer)

Block:

- contains application data and control data of the protocol
- structure of a block:
  - prologue field: 1 byte NAD(node address- destination and source), 1 byte PCB (protocol control block - e.g. sending sequence number(mod 2)), 1 byte LEN (length)
  - information field: APDU
  - epilogue field: EDC . It contains either a CRC error detection code from ISO or just LCR - XOR of all bytes (faster, easier but less usable as error detection)
- send/receive counter: binary
- parameters for transmission to avoid deadlocks:
  - CWT -character waiting time, in order to avoid deadlock, (time interval between the leading edges of characters),  $CWT = 2^{CWI} + 11$  etu, CWI parameter is taken from ATR, default CWI=13

→ BWT block waiting time: between leading edge of XOR in the epilogue field and leading edge of NAD in the response of the card

$$\text{BWT} = 2^{\text{BWI}} \cdot 960 \cdot \frac{372}{f} \text{ sec} + 11 \text{ etu}$$

for the default BWI=4 it means  $\approx 1.6 \text{ sec}$

→ BGT - block guard time: time between communications in opposite directions

- waiting times can be changed during protocol execution
- block chaining: if block are larger than the buffer of the sender or receiver, then the data field is splitted and a chain of blocks is used. a flag “more” is used to indicate a chain
- error handling:
  - sophisticated mechanism
    - error -> the sender receives an R block indicating an error  $\Rightarrow$  retransmission of the last block
    - if retransmission ok, then resynchronisation with an S block, card acknowledges and the counters (on both sides) reset to 0
    - if a block cannot be sent then RESET and the whole session terminated, data transmitted so far is lost

Other protocols with potentially high importance:

#### USB (Universal Serial Bus)

- T=0, T=1 are no for slow data transmission,
- target: 12Mbit/s USB communication
- the main problem is time synchronization, USB assumes stability of frequency on both sides, but the smartcard has frequency from the reader – this is unstable. Extra circuit on the smart card required
- problem also with the code: USB requires a few KB of code for interface on card
- USB is encoding bits via difference of electrical levels on a pair of signal lines (more reliable than the encoding on a line), C4 and C8 used for USB (AUX1 and AUX2 contacts, normally unused)
- encoding method NRZI (nonreturn to zero) encoding: a 0 encoded by polarity reversal, for 1 polarity is unchanged,
- clock for the bus retrieved from the polarity reversals, what to do if there is a long block of 1's? after six ones obligatory bit stuffer - a zero.
- logical connection: 4bit “endpoints”. EP0 for control, other endpoints are unidirectional
- transfer modes:
  - control transfers: initiated on EP0, acknowledged on both directions,

- interrupt transfers for small amounts of data – not really an interrupt, since the time periods for interrupt transfers are fixed
- bulk transfers: non-time critical for large amounts of data
- isochronous transfers: for time critical transfers
- least significant bit sent first (little endian), data sent in frames at fixed time intervals (about 1ms), a frame starts with a SOF (start of frame) packet containing a packet identifier, frame number and CRC code

### SWP (Single Wire Protocol)

- NFC controller has to find a way to communicate with the SIM card while the card is communicating with the telephone with another channel
- C6 contact used as a single line (previous usage as external programming voltage for EEPROM not needed anymore)
- full duplex
- complicated encoding at the electrical level (card is always the slave):
  - S1 (master-to-slave): high voltage at 75% time – a 1, high voltage at 25% of time - a 0
  - S2 (slave to master): influences the voltage at the high voltage period of S1: 0 by reducing the voltage, 1 by keeping it high

---

## Contactless transmission

flexible batteries - expensive, so energy must come together with communication

### INDUCTIVE COUPLING:

range depends on power consumption inside: no computation on card, then range about 1m, with writing on the card- range 10cm to enable enough energy, 1m – few tens of microwatts, writing already 100 microwatts, processor already 10miliwat, legal restrictions on energy sent by readers

**wavelength** 2400m or 22m depending on frequency: much smaller than the distance between the card and reader: physical transformer model can be used

**voltage:** rectified on the chip, proportional to the signal frequency, depends on the number of turns in the coil and the coil area, strong current needed on coils

picture page 286

**transmission back:** (small) fluctuations of current on the side of smart card, in order to be able to separate from the strong signal from the reader: a different frequency for modulation is used, the reader applies a filter to separate them

picture page 287

### CAPACITIVE COUPLING:

by putting very close (on surface), coupling area both on terminal and on the card, two fields on card, two on reader, too low energy to run microprocessor directly so inductive coupling used anyway for providing energy

### **Collision avoidance:**

collisions between cards: possible as a single radio channel.

Methods of separation:

- space division multiple access
- time division multiple access - TDMA
- frequency division multiple access - FDMA
- code division multiple access - CDMA – codes on the same frequency. Decoding: searching how the transmission received could be composed of individual transmissions (main idea of UMTS)

### **CLOSE COUPLING CICC**

up to 1cm – slot or surface operation, must tolerate electrostatic discharge,

**power transmission:** via inductive coupling, power frequency 4.9 MHz,

two pairs H1,H1 and H3, H4 have phase shift of 90 degrees,

two pairs to make it resistant to card position

### **data transmission:**

- terminal to card (PSK phase shift keying): 4 alternating magnetic fields, all 4 fields shifted by 90°, to change a bit all four fields shift simultaneously by 90°, at the beginning a 1 is always sent [picture page 294](#)
- data transmission from the card to the terminal: modulation at 307.2kHz, change of bit by shift of phase by 180° of the subcarrier. [picture page 294](#)

### **Capacitive data transmission**

- timing constraints: how much time when power off, when power rises, for the first transmission to the card, for the first transmission from the card

### **PROXIMITY COUPLING ISO 14443**


- normal operation up to 10cm, large antennas for signal detection from bigger distances
- inductive coupling, magnetic field strength defined to be in some interval
- transmission frequency about  $f_c = 13$  Mhz
- many different applications
- communication interfaces: type A, type B (terminals periodically perform both just to be able to talk with both types of cards)

### type A:

- initialization: bitrate  $f_c/128$ , later a different bitrate chosen:  $f_c/k$  where  $k = 128, 64, 32, 16$

so the bitrate is 106kbits/s or 212 or 424 or 847

#### communication from terminal to card:

- amplitude modulation - with signal going to zero (short interrupts)
- small interrupts ( $3 \mu s$ )  $\Rightarrow$  no energy transmitted to the card but the card survives operating
- encoding: modified Miller encoding:
  - $\rightarrow$  transmitting a 1: pause after half bit interval
  - $\rightarrow$  transmitting a 0: no pause
  - $\rightarrow$  transmitting more zeroes: a pause between two consecutive zeroes, the first 0 has a pause before
  - $\rightarrow$  start: a pause
  - $\rightarrow$  example: | 0 | 1 | 0 | 0 | 1 |  

  - $\rightarrow$  end of message logical zero 0 followed by one bit period with no pause

#### from card to terminal

- load modulation with a subcarrier
- transmitting a 1: carrier modulate by subcarrier in the first half of the bit interval
- transmitting a 0: carrier modulate by subcarrier in the second half of the bit interval
- start of a message: carrier modulated by the subcarrier in the first half of the bit interval
- end of the message: no modulation by a subcarrier

fig. 10.21 page 302

### type B:

- no interruptions of energy supply

#### terminal to card:

- subcarrier modulation
- modulation index 10% (slight changes of the amplitude)

- encoding: NRZ (non-return-zero), simply a higher amplitude means a 1 and the lower one means a 0.

**card to terminal:**

- modulation with BSPK (binary phase shift keying)- shift of  $180^{\circ}$
- no change of the character = no phase shift, if there is a change then a phase shift,
- initially: subcarrier with no phase shifting for some period of time
- the first character is understood to be a logical 1

figure page 304

**Anticollision mechanism**

two cards communicating with the reader during initialization phase

**type A**

- Manchester encoding used to ensure collision detection:
  - subcarrier modulated in the half of the interval
  - "first high- then low" or "first low-then high" to encode two bit values
  - if the signals are synchronous than overlapping produces a "high-high" and an evidence of collision
- all cards are transmitting synchronously their IDs
- after Reset the card in the Idle state and can only answer the Type A Request (REQA) and Type A Wake-up (WUPA),
- then the cards send synchronously Answer to Request type A (ATQA)
- the terminal receives the responses and knows that at least one card is present
- message format ATQA: the first part for the reader the second part for the cards, in the first part bytes of address specified, in the second part all matching cards respond.
- The length of the parts vary, but the total length is the always the same. The first part has at least 16 bits and no more than 55 bits.
- ANTYCOLLISION or SELECT: the message specifies UID (card ID - either random for the session or a fixed one) and the number of bits relevant. Only the cards that match the UID (on a given portion), reply
- step by step until only one card responds

**type B**

- predefined time slots
- dynamic slotted Aloha, number of slots in the REQB
- all cards Idle until REQB, then choose a random slot to send its data

---

## SIM Cards and telecommunication systems

Problems to be solved:

- how to authenticate the subscribers?
- how to protect the communication confidentiality?
- how to know the position of the subscriber?
- distributing security functions?
- how to work in roaming with partially trusted partners?
- interoperability

### GSM

- subscriber ID: IMEI (international mobile equipment identity) - ID of a phone, IMSI - international mobile subscriber information - ID of a user (never transmitted in clear), TMSI - temporary mobile subscriber identity – temporary and related to local area
- SIM card (Subscriber Identity module):
  - dedicated commands
  - storage for some user data
  - user management
  - security functions: authentication, encryption
- key management:

a secret key  $K_i$  on the smartcard, shared with the provider, a copy available in AuC

possible on-the-fly derivation  $K_i=f(\text{IMSI})$ , where  $f$  is a private function of the provider
- authentication:
  1. BSS (or MSC) generates RAND at random and sends to the mobile station
  2. mobile station:  $\text{SRES}:=g(\text{RAND},K_i)$ , where  $g$  is a provider specific function (e.g. might be A3)
  3. SRES sent to BSS, where the result is checked
- encryption:
  1. RAND reused

2. mobile station:  $K_c := h(\text{RAND}, K_i)$ , where  $h$  is a provider specific function (e.g. might be A8)
  3. BSS:  $K_c := h(\text{RAND}, K_i)$
  4. encryption with the session key  $K_c$  and a stream cipher. The key for a frame:  $r(\text{TDMA frame number}, K_c)$  where  $r$  is a provider specific function (e.g. A5), the encrypted frame is the frame plaintext XOR frame key
  5. the communication: down and uplink interleaved, short frame
- problems with distributing the user secret keys:
    - instead of providing the key  $K_i$  of the user, AuC distributes on demand valid the triples  $(\text{RAND}, \text{SRES}, K_c)$
    - the local provider from the Visited Network does not have to implement the provider specific algorithms, or even to know them  $\Rightarrow$  easy roaming and cooperation with different vendor systems
  - attack (IMSI catcher device used):
    - the mobile user gets authenticated, but the network is not authenticated,
    - use a fake base station, starting authentication, accepting whatever SRES comes and switching off the encryption
    - connecting to other subscriber via a different link (via a prepaid card, not showing subscriber number)
  - attack: only the links between the mobile phone and the base station are secured, no end-to-end encryption or authentication. E.g. point-to-point microwave links used in the access network, where eavesdropping is easy
  - protecting identity: TMSI used instead of IMSI after first authentication of a user in a service area
  - local authentication: not all time the triples from the AuC used, instead the sessions are linked in the Visited Network
  - cloning a SIM card is a problem (the provider may create a copy of the card e.g. for eavesdropping)

## UMTS

- USIM card used instead of SIM
- CDMA coding - more sophisticated and in principle better. In practice leads to problems, and LTE is simplifies a lot (and makes it more efficient)



- reuse of concepts: limited trust in the Visited Network, identity protection
- correcting security problems:
  - fake base station
  - encryption in the access network
  - no cleartext transmissions
- authentication tuples: (RAND, XRES, CK, IK,AUTN), XRES=expected response, CK=cipher key, IK=integrity key
- $XRES=f_2(RAND,K_i)$ ,  $CK=f_3(RAND,K_i)$ ,  $IK=f_4(RAND,K_i)$ ,  $AUTN=SQN \otimes AK || AMF || MAC$ ,  $AK=f_5(RAND, K_i)$ ,  $MAC=f_1(RAND,AMF,K_i)$ , AMF - system parameters
- AKA (Authentication and Key Agreement protocol):
  1. service network to mobile user: RAND(i), AUTN(i) (taken from the list)
  2. mobile user computes verifies AUTN(i) (SQN must be in a correct range), recomputes XRES(i) via definition, replies with XRES(i)
  3. use CK(i) for encryption and IK(i) for integrity
- problematic synchronisation with SQN

## TPM

- Trusted Platform Module, small integrated circuits on motherboard of PC, laptop (but also specifications for mobile, embedded, ...), 28 pin, may be integrated with other chips
- passive hardware module (responds to requests and nothing more), complicated command set, TCG Software Stack to ease using TPM,
- specification by Trusted Computing Group of Trusted Platform Alliance (industry initiative)
- on major products: Dell, Lenoovo, HP, Toshiba, ...
- not allowed in Russia (no TPM), own obligatory specification in China (partially secret)
- "root of trust"
- specification TPM 1.2 and TPM 2.0
- lack of commercial success
- inexpensive chip, hard to use, limited usability
- controversies: a tool to monopolize the software market

- origin: sophisticated malware attacks, defend insecure OS by TPM as antivirus is only partially effective

**goals:**

- secure storage
- keeping track of booting process
- attestation of the state of the operating system
- not really converting into secure operating systems
- applications started only in a certain state of OS
- flexible to work with different systems

**Crypto (TPM 1.2):**

- RSA (2048 and 1024)
- SHA-1 (no hash longer than 160 bits!)
- HMAC (keyed-Hash Message Authentication Code)
- RNG
- no symmetric crypto due to US law at that time (restrictions to export and therefore the whole idea of standardization fails for symmetric algorithms)
- operations: asymmetric encryption, signatures, HMAC,

**Storage:**

- PCR (platform configuration registers), storing SHA-1 hash values (160 bits)
- each PCR has an index and is devoted to different data: 0-7 measure core system components like BIOS, 8-15 are OS defined, 16-23 for late launch
- operations on PCR:
  - reset at boot time
  - otherwise only extend operation  $\text{Extend}(\text{PCR}, \text{value}) = \text{Hash}(\text{PCR} || \text{value})$
- NVRAM - small nonvolatile random access memory
- counters (only increasing until reset when back to 0)
- storing keys:
  - the main key permanently in TPM and never allowed to leave it ("stored internal to the TPM") (SRK - Storage Root Key)

- other keys encrypted and exported outside. In case of need imported to TPM, decrypted with keys that are in TPM
- exported data contain the key value itself and a “proof” - a value known to TPM only, and authorization information. The exported ciphertext is called a “blob”.
- importing: load command and a blob, TPM decrypts with SRK, checks the proof, checks the supplied password
- keys might be for encryption or digital signature

### **Measured Boot**

- booting process: a sequence of stages where the next code uploaded and executed
- before executing a code its hash “extends” the PCR value (which PCR depends on the stage)
- the first piece of code should be completely write-protected
- result: a set of PCR values that cannot be manipulated. A fingerprint of what has been booted. may be used to check against a know value – in case of manipulation the state of PCRs is different than expected
- this is not the same as Secure Boot where the signature over the code is checked at each stage

### **Late launch:**

the same mechanism as for booting for security critical issues

not controlled by operating system, not breakable

### **Sealed Storage**

- files encrypted with key exported from TPM. Decryption only via TPM
- decryption only when the machine is in a proper state (judgement based on the contents of PCRs)

### **Network Attestation**

- sending data about the machine state
- steps:
  - random nonce sent from a server to TPM
  - client software determines identity key to be used
  - TPM hashes PCR values together with nonce and signs with identity key
- nonce is for freshness

## Overview of TPM 2.0

### Cryptography:

- RSA of TPM 1.2 became weak
- SHA-1 of TPM-1 became weak, but replacing it with SHA-2 or SHA-3 impossible due to hash length (additional 12 bytes)
- TPM 1.2. stores RSA keys via factorization: but only one factor - which saves space, but is slow (storing both factors would be impossible due to the size). TPM 2.0 uses symmetric encryption and there is no problem
- TPM 2.0 lists a variety of algorithms: SHA-1 and RSA for backward compatibility but also SHA-256, AES, EC, (also Chinese algorithms?)
- encryption of a key should be by a key at least as strong as the encrypted key. Controversies what is stronger... Mixing algorithms not allowed.
- if a key cannot be duplicated and moved to another TPM then it must be encrypted with exactly the same algorithm

### Authentication

- TPM 1.2 very limited: only by passwords and PCR values
- TPM 1.2: password inserted into the command sent to TPM, problem with two users for the same machine!
- Enhanced Authorization (EA) of TPM 2.0:
  - basic mechanism: software interacting with TPM must show knowledge of a password
  - policies: multiply authorization methods and Boolean logic to combine them
  - TPM stores a hash of a Boolean logic and values for authentication methods
  - authentication methods:
    - passwords
    - PCR values
    - TPM counter
    - commands (object use may be limited to certain commands)
    - digital signature of a user (from a smart card)

### Compatible Specifications

- specification well structured (1.introduction, 2. list of variables, structures, constants, 3. list of commands with brief description in English, 4. subroutines for part 3 in pseudocode)
- misunderstandings because of pseudocode

- Microsoft tool to extract compatible reference TPM – but not available for external users

specification well structured (1.introduction, 2. list of variables, structures, constants, 3. list of commands with brief description in English, 4. subroutines for part 3 in pseudocode)

### Activation

- TPM 2.0 on by default
- firmware has full access to TPM just like the owner

## TPM 1.2 details

### secure storage

- initialization of TPM: invoking TPM\_TakeOwnership creates SRK (Storage Root Key), at the same time also secret tmpProof - to identify the blobs produced by the TPM
- tree of keys
- creating a key: TPM\_CreateWrapKey , arguments: parent key, new encrypted authdata, authorization HMAC based on the parent authdata, key exported
- loading a key: necessary to use the key, TPM\_LoadKey2, arguments: key blob, returns handle to the key to be used in following commands
- after key loaded one can use TPM\_Seal and TPM\_Unseal , requires authorisation from authdata

### authentication sessions

**OIAP** – object independent authentication protocol,

nonces of the user process: “odd”

nonces of the TPM: “even” nonces

nonces sent with each message, authentication HMAC takes into consideration the most recent odd and even nonce (linking the messages)

for commands that can manipulate many objects

**OSAP** – object specific ...,

OSAP secret: based on even and odd nonce and authdata for the object

HMAC computed with OSAP secret

### ADIP encryption

AuthData Insertion Protocol

OSAP session can invoke it

authdata is encrypted with XOR with one-time key computed as  $\text{SHA-1}(s, n_e)$  where  $s$  is the OSAP secret and  $n_e$  is the current even nonce

## Platform Authentication

- each TPM has a unique pair of *endorsement keys* (EK) set at manufacture time and (usually) certified by manufacturer, used for encryption only
- may be changed by the owner, but regarded as the identity long time key, (tpmProof is secret, so cannot be used as identity)
- AIK (*application identity key*) can also be created. They are used to sign application-specific data and PCR state via TPM\_Quote,
- AIK has to be authenticated! Either from a certificate from privacy CA or via Direct Anonymous Attestation

## Privacy CA

- signs public part of AIK
- user software:
  - creates AIK via: TPM\_MakeIdentity,
  - sends public key together with certificate on EK to CA
  - CA checks the certificate of EK
  - CA signs a certificate for AIK
  - CA encrypts certificate with a new session key -> blob B1
  - CA encrypts the session key and the public AIK with EK, creating blob B2
  - CA sends blobs to software
  - software sends B2 to TPM
  - TPM checks that AIK is in the TPM and releases the decryption key
  - software decrypts B1

## Key migration

### migratable keys

- TPM-CreateWrapKey with parameter, authdata specified for allowing migration
- TPM\_CreateMigrationBlob with input: wrapped key, its parent key handle, migration type, authorisation digest (parent key usage authorisation, migration authorization)
- type REWRAP: rewraps with migration public key (key of another TPM)
- type MIGRATE: unwraps and XORs with a random password  $r$ , returns the blob and  $r$

### certifiable migratable keys

- created with TPM\_CMK-CreateKey and then certified with TPM\_CertifyKey2

- certificate specifies Migration Selection Authority (or more) (authorities restricting destinations)
- Pre-approved Destinations (PAD)
- creating a CMK:
  - TPM\_CMK\_ApproveMA: source TPM creates a ticket to approve some MSA and PDAs
  - TPM\_CMK\_CreateKey: takes ticket from TPM\_CMK\_ApproveMA
  - TPM\_AuthorizeMigrationKey: owner of TPM approves migration of the key
- exporting CMK: (to PDA or MSA)
  - TPM\_CMK\_CreateBlob on
    - CMK wrapped key
    - migrationKeyAuth
    - MSA list
    - sigTicket form MSA nad restrict Ticket (public keys belonging to MSA, destination parent key, and key-to-be-migrated)

### Delegation

the purpose: delegating some priviledge of the owner to another party and may be withdraw later

possible to create authdata value for the resource with list of admitted commands

### Blobs:

AuthData- controls ability to read, write, aund use objects stored in the TPM and execute TPM commands, 160 bit secret, knowledge of it by computing HMAC

key blobs -  $\text{Blob}(\text{PK}, \text{SK}) = \text{PUBBlob}(\text{PK}, \text{SK}) \parallel \text{Enc}(\text{PK}_{\text{parent}}, \text{PrivBlob}(\text{PK}, \text{SK}))$

$\text{PUBBlob}(\text{PK}, \text{SK}) = \text{PK} \parallel \text{PCR values}$

$\text{PrivBlob}(\text{PK}, \text{SK}) = \text{SK} \parallel \text{Hash}(\text{PubBlob}(\text{PK}, \text{SK})) \parallel \text{tpmProof}$

### Problems:

- huge documentation
- complex administration
- when starting then operation resembles malware operation (rebooting, strange communicates)
- typical PKI problems
- privacy issues (when used for attestation)
- low effect
- malicious use not controlable by OS

---

## REMOTE ATTESTATION

### goal:

- attestation that a target machine has certain (desirable) properties
- make decision whether further interaction with this machine (e.g. whether to transmit sensitive data)
- it should check, whether the target machine is safe if the target is safe

### Problems to be solved:

#### attacks:

- inserting unauthorized code to the servers on a large scale
- the attack is remote
- attacked computers are standard general purpose machines,
- network involves interaction between independent entities (retailers, distributors, financial organizations,...)

**Goal:** protocol parties can check remotely that the computer of the partner is in some sense in a decent state (e.g. a bank and a customer: the bank has to check if the customer's PC is protected)

### Attestation architecture:

#### desired properties:

- measurements: measure diverse aspect of target, choice non-trivial
  - a bad strategy: hashes of memory, one cannot derive too much about machine behavior,
  - problems with data compression
- domain separation:
  - the attester should not interfere too much with the operation on the target
  - the state of the measurement tool must be inaccessible to the target machine
  - the result: *corrupted* or *uncorrupted* - additional data is itself a problem
  - separation implementation strategies:
    - a copy of the target on a Virtual Machine
    - hardware separation: coprocessor used for attestation only, visibility by hardware constraints and not by configuration of a hypervisor



- self-protecting trust base: not too big (then audit/certification of the trust base too complex)
- delegate attestation to proxies:
  - if some data must not reach the attester, then use a proxy between the target and the attester
  - specialized proxies
- attestation management: flexibility is necessary, queries: constraints subject to policies, communication, Attestation Manager as a local component to govern these issues

## Example Architecture

Components:

- trust base: TPM/CPU, hypervisor
- S-Guest: supervisory virtual platform: contains virtual TPM, M&A (measurements and attestation)
- U-guest: user platform with “normal” operating system: contains virtual TPM, M&A

## PROTOCOLS

### IBM Protocol:

verifier: sends a nonce  $N$ , 160 bits to attestation service

attestation service: request  $N$  to TPM

TPM to attestation service:  $ML$  (measurement list),  $\text{Sig}_{\text{AIK}}(\text{PCR}, N)$

attestation service to verifier:  $\text{Sig}_{\text{AIK}}(\text{PCR}, N)$ ,  $ML$ ,  $\text{AIK}_{\text{cert}}$

verifier: check signatures and certificates

### CAVES

- Attester, Client, Server, Verifier, EPCA (Enterprise Privacy CA)
- steps:
  1. Client to Server: request  $R$ , attester  $A$ , key  $K$  encrypted by Server’s key ( $K$  is a session key for Client-Server)
  2. Server to Verifier:  $S$  (Server),  $R$ ,  $A$ ,  $N_S$  (server nonce) encrypted with Verifier’s public key,
  3. Verifier gets from EPCA a signed record containing certificate,  $A$ ,  $I$ (identity key of Attester),  $E$  (name of EPCA)

4. Verifier to Server: encrypted:  $N_V$  (verifier's nonce),  $J$  (query),  $V$ ,  $N_S$ ,  $M$  (PCR mask)
5. Server to Client:  $N_V$ ,  $J$ ,  $V$ ,  $M$  encrypted with  $K$ .
6. Client to Attester: (encryption with a long period shared symmetric key)  $S$ ,  $N_V$ ,  $J$ ,  $V$ ,  $M$ ,  $R$ .
7. Attester to Client: (encryption as above)
  - $K'$  (extra key),  $N_V$ ,  $B$  (blob)
  - $B$  is a ciphertext encrypted with the public key of the verifier of:
    - $K'$ ,  $S$ ,  $J_O$  (measurement),  $M$ ,  $P$  (PCR vector)
    - signature created with  $I$  for  $\text{Hash}(\text{Hash}(A, V, R, N_V, J, J_O), M, P)$
8. Client to Server:  $B$
9. Server to Verifier:  $B$
10. Verifier to Server: encrypted with  $K_S$ : verification result,  $N_S$ ,  $K'$
11. Server to Client: data encrypted with  $K'$

Some properties:

- client and server cannot read the attestation result and cannot manipulate it without detection

## Direct Anonymous Attestation (DDA)

goal: remote testing a device on the other side without learning its identity

parties:

- host (operating system and application software)
- TPM
- the issuer (similar as Privacy CA and checks EK certificate)
- verifier

protocol:

- DDA-join: TPM chooses a secret  $f$ , the issuer creates a blind signature of  $f$  (credential  $cre$ ), encrypts it with the Endorsement Key and sends it to the TPM
- DDA-sign: signature of AIK using  $(f, cre)$

## Building blocks

### Schnorr authentication modulo an RSA number

- RSA number  $n$  of length  $l_n$
- user's public key  $y = g^x \bmod n$ ,  $x$  is a private key of length  $l$
- authentication: the prover chooses  $r$  of length  $l_n + l_c + l_{\text{phi}}$  and  $t = g^r \bmod n$ , he sends  $t$  to the verifier
- the verifier chooses  $c$  at random
- the prover replies with  $s = r - x \cdot c$  computed **as integers**, for large  $l_{\text{phi}}$  this does not leak much information about  $x$
- the verifier checks that  $t = y^c \cdot g^s$
- security argument based on Strong RSA assumption:

on a random RSA number  $n$  and  $u < n$  it is infeasible to find  $v$  and  $e > 1$  such that  $v^e = u \bmod n$ .

It follows that for random  $g, h$  it is hard to compute  $w < n$  and integers  $a, b, c$  such that  $w^c = g^a h^b \bmod n$  where  $c$  does not divide  $a$  and  $b$

### A version proving that $x$ is in a given interval

- as above but  $r$  of length  $l_x + l_c + l_{\text{phi}}$
- .. and a check that  $s$  is of the length at most  $l_x + l_c + l_{\text{phi}}$  (including negative numbers)
- similar protocols may be built to show that the secret is in a given interval

### Camenisch-Lysyanskaya Signature

- blind signature: a signer does not see the message to be signed,
- the resulting signature is randomizable
- keys:  $n = p \cdot q$  RSA number, public key: randomly chosen squares  $R_0, R_1, \dots, R_{L-1}, S, Z < n$ , secret key:  $p$
- message space:  $L$  strings of  $l_m$  bit numbers
- creating a signature:

1. choose a prime number  $e$  of length  $l_e > l_m + 2$
2. choose a random number  $v$  of length  $l_v = l_n + l_m + l_r$ , where  $l_r$  is a security parameter
3. compute  $A := \left( \frac{Z}{R_0^{m_0} \dots R_{L-1}^{m_{L-1}} S^v} \right)^{1/e} \bmod n$   
where  $1/e$  means  $1/e \bmod (p-1)(q-1)$
4. output  $(A, e, v)$

- verification: check that  $Z = A^e R_0^{m_0} \dots R_{L-1}^{m_{L-1}} S^v \pmod n$  and that the range of each element is as described
- provable security: based on the strong RSA assumption

### Camemisch-Lysyanskaya Signature on a (partially) secret message

- as CL but now the receiver computes  $U = R_0^{m_0} \dots R_i^{m_i} S^{v'}$  for  $v'$  chosen at random, and sends  $U$  to the signer
- the receiver proves (noninteractive zero knowledge proof) that he actually knows some  $m_0, \dots, m_i, v'$  that yield  $U$
- the signer computes  $A := \left( \frac{Z}{U \cdot R_{i+1}^{m_{i+1}} \dots R_{L-1}^{m_{L-1}} S^{v''}} \right)^{1/e} \pmod n$
- the signer proves that  $A$  has this form
- the signature is  $(A, e, v)$ , where  $v = v' + v''$

### Proving possession of a signature

- proving possession of signature  $(A, e, v)$  of  $m$ , i.e. satisfying  $Z = R_0^m S^v A^e \pmod n$
- given a signature  $(A, v, e)$  choose  $r$  at random and compute  $A' := A \cdot S^{-r}$ ,  $v' := v + e \cdot r$ , the new signature is  $(A', e, v')$
- $A'$  is uniformly distributed, so it does not leak information on the signature
- proving possession of  $\epsilon, v', \mu$  such that  $Z = R_0^\mu A'^\epsilon S^{v'}$  and that they are in a proper interval

### Direct Anonymous Attestation - an overview

#### Properties:

**unforgeability.** DAA-Sign can be successful only if TPM before has executed DDA-Join

**anonymity.** information from DDA-Sign do not enable to link with DDA-Join

**rogue tagging.** given DDA related secret information of a rogue TPM, the verifier can check if DDA-Sign has been executed by this party

#### System parameters:

- lengths of diverse parameters,

#### Key generation (performed by the Issuer)

- RSA number  $n = p \cdot q$  ( $p = 2p' + 1$ ,  $q = 2q' + 1$ )
- $S$  random generator of quadratic residues mod  $n$  (squares modulo  $n$ )
- random  $x_0, x_1, x_z < p'q'$

- $Z = S^{xz}$ ,  $R_0 = S^{x_0}$ ,  $R_1 = S^{x_1}$
- a proof that  $Z, R_0, R_1$  have been computed correctly
- primes  $\rho, \Gamma$ , with  $\Gamma = r\rho + 1$ , where  $\rho$  is not a factor of  $r$
- group  $\mathbb{Z}_\Gamma^*$ , and an element  $\gamma \in \mathbb{Z}_\Gamma^*$  of order  $\rho$
- a random identifier  $\zeta_I$

### DDA-Join

- TPM chooses a random  $f \in \mathbb{Z}_\Gamma^*$ ,  $f = f_0 || f_1$  (concatenation)
- TPM computes its pseudonym  $N_I = \zeta_I^f \bmod \Gamma$  and sends it to the Issuer
- the issuer checks all rogue  $(f'_0, f'_1)$  whether  $N_I \neq \zeta_I^{f'_0 || f'_1} \bmod \Gamma$  (if yes, then abort)
- blind signature of  $f$  by the Issuer:
  - TPM chooses  $v'$  at random,  $U = R_0^{f_0} R_1^{f_1} S^{v'}$ , sends  $U$  to the issuer
  - TPM proves that  $U$  has been created correctly
  - TPM authenticates  $U$  to the issuer with the endorsement key
  - Issuer chooses random  $v'' = \hat{v} + 2^{\dots}$  (a leading one inserted)

$$A = \left( \frac{Z}{U \cdot S^{v''}} \right)^{1/e}$$

sends  $A, v'', e$  to the host of TPM

- Issuer proves to the host that  $A, v''$  have been correctly created
- the host stores  $A, v'', e$  and sends  $v''$  to the TPM
- TPM sets  $v = v' + v''$  and stores  $(f_0, f_1, v)$
- so after executing the protocol host+TPM obtain a “certificate” from the Issuer, but neither the host nor the TPM knows it completely

### DDA-Sign

- the host sends  $\zeta$ , a random power of  $\gamma$ , to the TPM
- TPM computes  $N_V = \zeta^{f_0 || f_1}$  and sends it to the host
- TPM and the host create a “signature of knowledge” that they know together DDA-certificate and that the same numbers  $f_0, f_1$  have been used:
  - the host picks  $w$  at random at some range and computes  $A' = A \cdot S^{-w} \bmod n$
  - TPM picks  $r_v, r_0, r_1$  in some predefined range and randomizes:

$$\hat{U} = R_0^{r_{f_0}} R_1^{r_{f_1}} S^{r_v} \bmod n$$

$$\hat{r}_f = r_{f_0} \| r_{f_1} \bmod \rho$$

$$\hat{N}_V = \zeta^{\hat{r}_f} \bmod \Gamma$$

and sends  $\hat{U}, \hat{N}_V$  to the host

iii. the host picks  $r_e, r_w$  at random (in an appropriate range) and computes

$$\hat{A}' = \hat{U}^{-1} \cdot A^{r_e} \cdot S^{r_w}$$

iv. the host receives a nonce  $n_V$  from the verifier and computes a hash  $c_h$  of

... (parameters),  $\zeta, A', N_V, \hat{A}', \hat{N}_V, n_V$

v. TPM computes  $c = \text{Hash}(\text{Hash}(c_h, n_t), b, m)$  for a nonce  $n_t$  and  $b = ?$

and sends  $c, n_t$  to the host

vi. TPM computes  $s_v = r_v + c \cdot v, s_{\phi_0} = r_{f_0} - c \cdot f_0, s_{\phi_1} = r_{f_1} - c \cdot f_1$  and sends them to the host

vii. the host computes over integers

$$s_{\hat{e}} = r_e + c \cdot (e - 2^{l_e - 1}), s_{\hat{v}} = s_v + r_w + c \cdot (e \cdot w)$$

viii. the signature  $\zeta, A', N_V, c, n_t, s_{\hat{v}}, s_{\phi_0}, s_{\phi_1}, s_{\hat{e}}$

• Verification:

i. reconstruct  $\hat{N}_V$  as  $N_V^c \cdot \zeta^{s_{\phi_0} + 2^{l_f}}$

ii. reconstruct  $\hat{A}'$  as  $\left( Z \cdot A'^{-2^{l_e - 1}} \right)^{-c} \cdot R_0^{s_{\phi_0}} \cdot R_1^{s_{\phi_1}} \cdot S^{s_{\hat{v}}}$

iii. recompute  $c$

iv. change the range of all elements

v. check whether  $N_V$  is on the rouge list

## RFID security

### Distance bounding

#### Distance fraud attack

genuine card - rogue reader(close to genuine card) -(fast link)- rouge card (strong antenna, active, strong signal, 50 m) - genuine reader

delay short, standards leave plenty of time - long timeouts (e.g. 5s)